




# MD Helicopters Model 500C, D

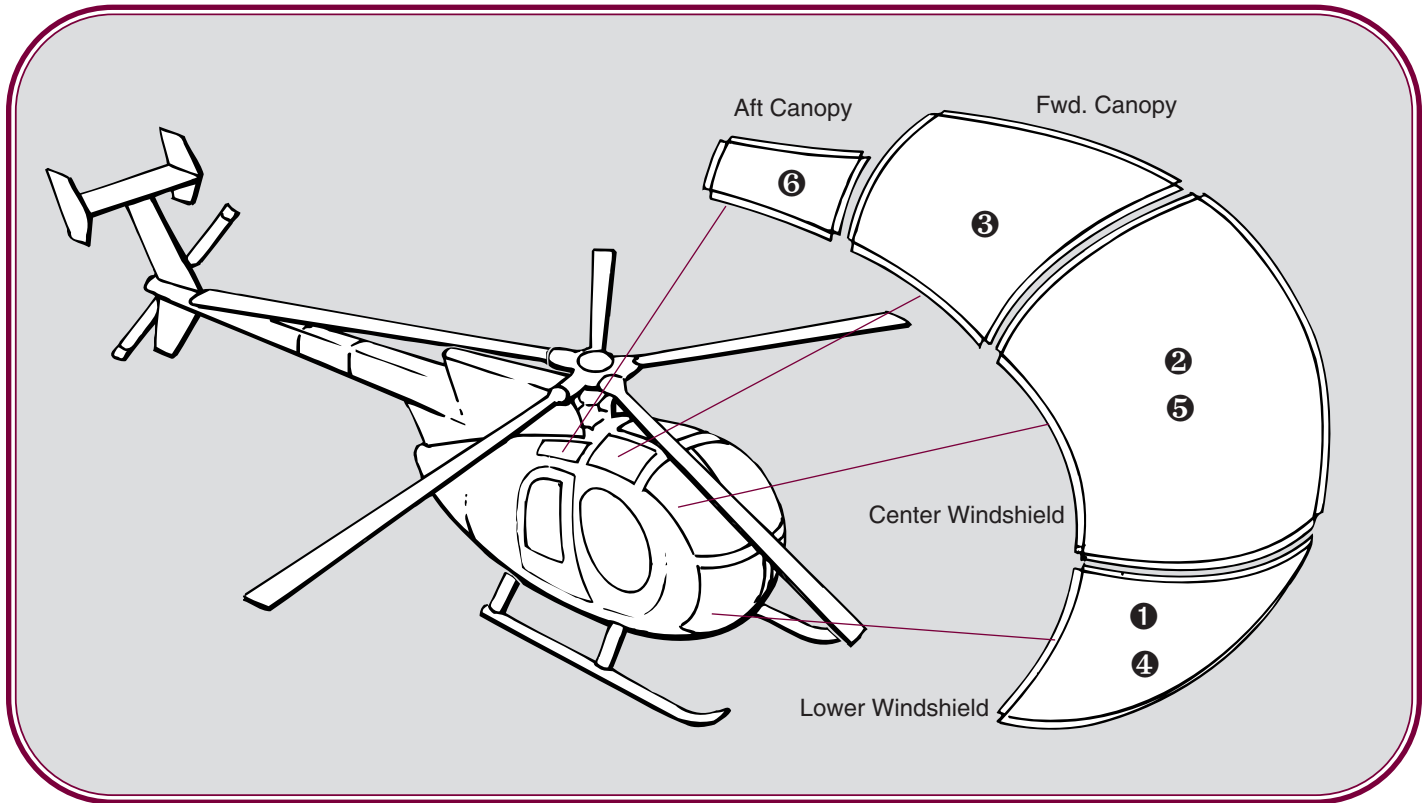

**1 Lower Windshield (Light Smoke Tint)**  
Part Number | Replaces OEM No.

369-3501-1	L/H	369H2419-1,501 369A2403-505
369-3501-2	R/H	369H2419-2,502 369A2403-506

**2 Center Windshield (Light Smoke Tint)**  
Part Number | Replaces OEM No.

369-3502-1	L/H	369H2418-11,501 369A2404-505,507, 705,707
369-3502-2	R/H	369H2418-2,502 369A2404-506,508, 706,708

**3 Fwd. Canopy (Dark Tint)**  
Part Number | Replaces OEM No.

369-3503-1	L/H	369H2410-1,501,901
369-3503-2	R/H	369H2410-2,502,902

**4 Lower Windshield (Military Clear)**  
Part Number | Replaces OEM No.

369-3501-1	L/H	369H2419-503 369A2403-501
369-3501-2	R/H	369H2419-504 369A2403-502

**5 Center Windshield (Military Clear)**  
Part Number | Replaces OEM No.

369-3502-1	L/H	369H2418-503 369A2404-503,701
369-3502-2	R/H	369H2418-504 369A2404-502,702

**6 Aft Canopy (Dark Tint)**  
Part Number | Replaces OEM No.


369-3504-1	L/H	369H3019-1,501,901
369-3504-2	R/H	369H3019-2,502,902



**TECH-TOOL PLASTICS, INC.**

7800 Skyline Park Drive • Fort Worth, Texas 76108 • www.tech-tool.com

# MD Helicopters Model 500E, F, FF, N

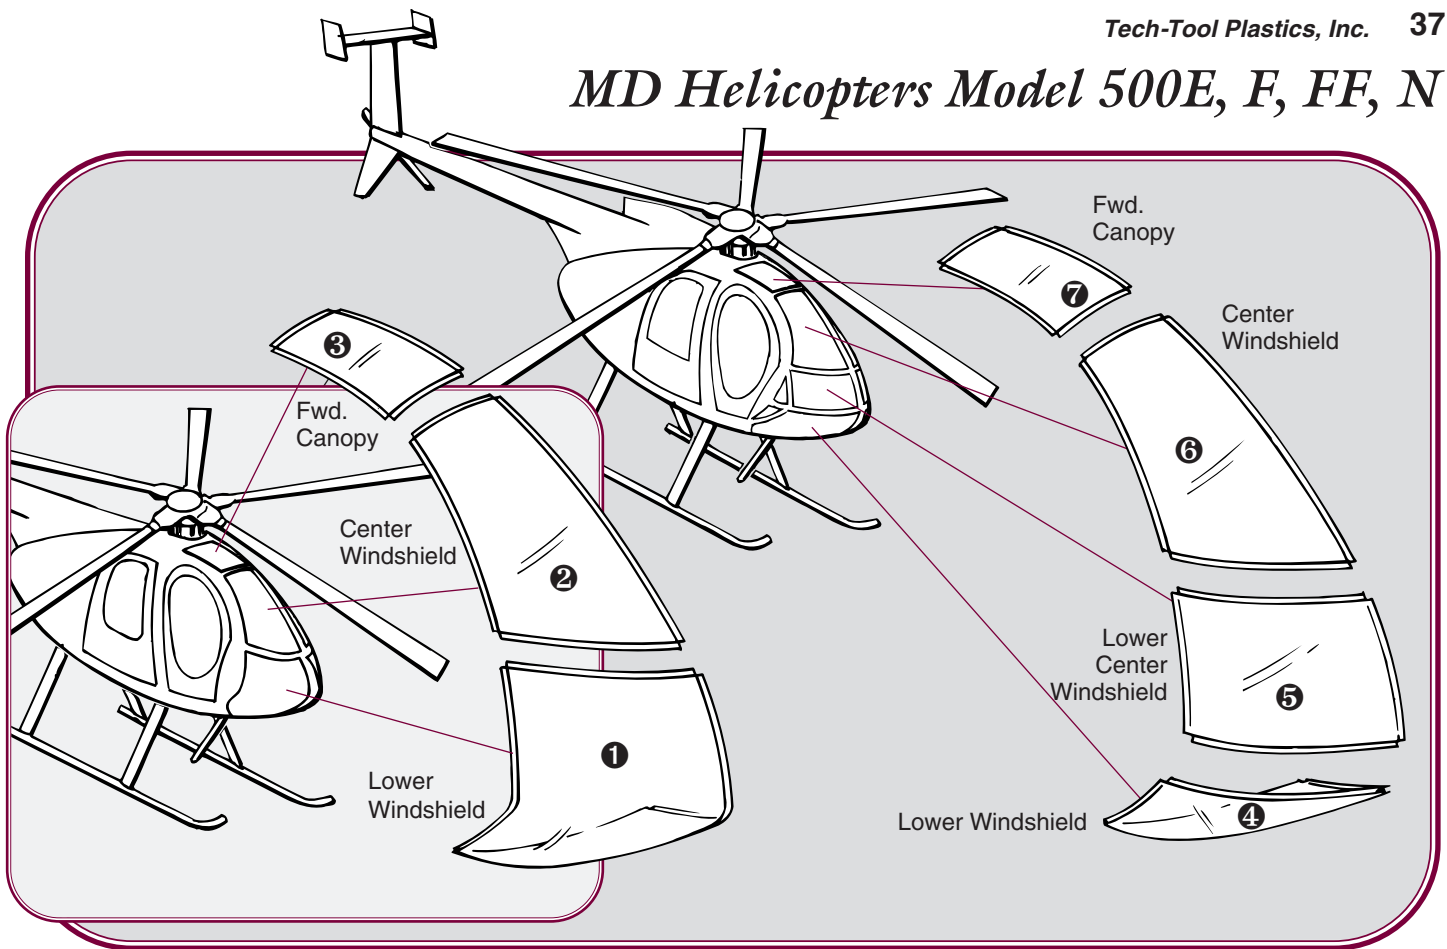

**Model E, F, FF, N  
with one-piece lower windshield**

**1 Lower Windshield ★**

Part Number		Replaces OEM No.
369-4501-1	L/H	369D22430-1 **
		369D22429-1 **
		369D22430-501 **
		369D22429-501 **
		369D22418-1,101 **
369-4501-2	R/H	369D22430-2 **
		369D22429-2 **
		369D22430-502 **
		369D22429-502 **
		369D22418-2,102 **

**2 Center Windshield ★**

Part Number		Replaces OEM No.
369-4502-1	L/H	369D22428-501 **
		369D22417-1,101,103 **
369-4502-2	R/H	369D22428-502 **
		369D22417-2,102,104 **

**3 Fwd. Canopy (Dark Tint)**

Part Number		Replaces OEM No.
369-3503-1	L/H	369H2410-501,901
369-3503-2	R/H	369H2410-502,902

**Model E, F, FF  
with two-piece lower windshield**

**4 Lower Windshield ★**

Part Number		Replaces OEM No.
369-5501-1	L/H	369D22429-1,503*
369-5501-2	R/H	369D22429-2,504*

**5 Lower Center Windshield ★**

Part Number		Replaces OEM No.
369-5503-1	L/H	369D22430-1,503*
369-5503-2	R/H	369D22430-2,504*

**6 Center Windshield ★**

Part Number		Replaces OEM No.
369-5502-1	L/H	369D22428-1,503*
369-5502-2	R/H	369D22428-2,504*

**7 Fwd. Canopy (Dark Tint)**


Part Number		Replaces OEM No.
369-3503-1	L/H	369H2410-501,901
369-3503-2	R/H	369H2410-502,902

★ For these windows, specify  
Light Smoke or Military Clear.

\*Effective E Models thru S/N 229, FF Model S/N 1 thru 59  
\*\*Effective E Models S/N 230 and up, FF Model S/N 60 and up

**Replacement Windows for the Helicopter World**

# MD Helicopters Model 500C, D, E, F, FF, OH6

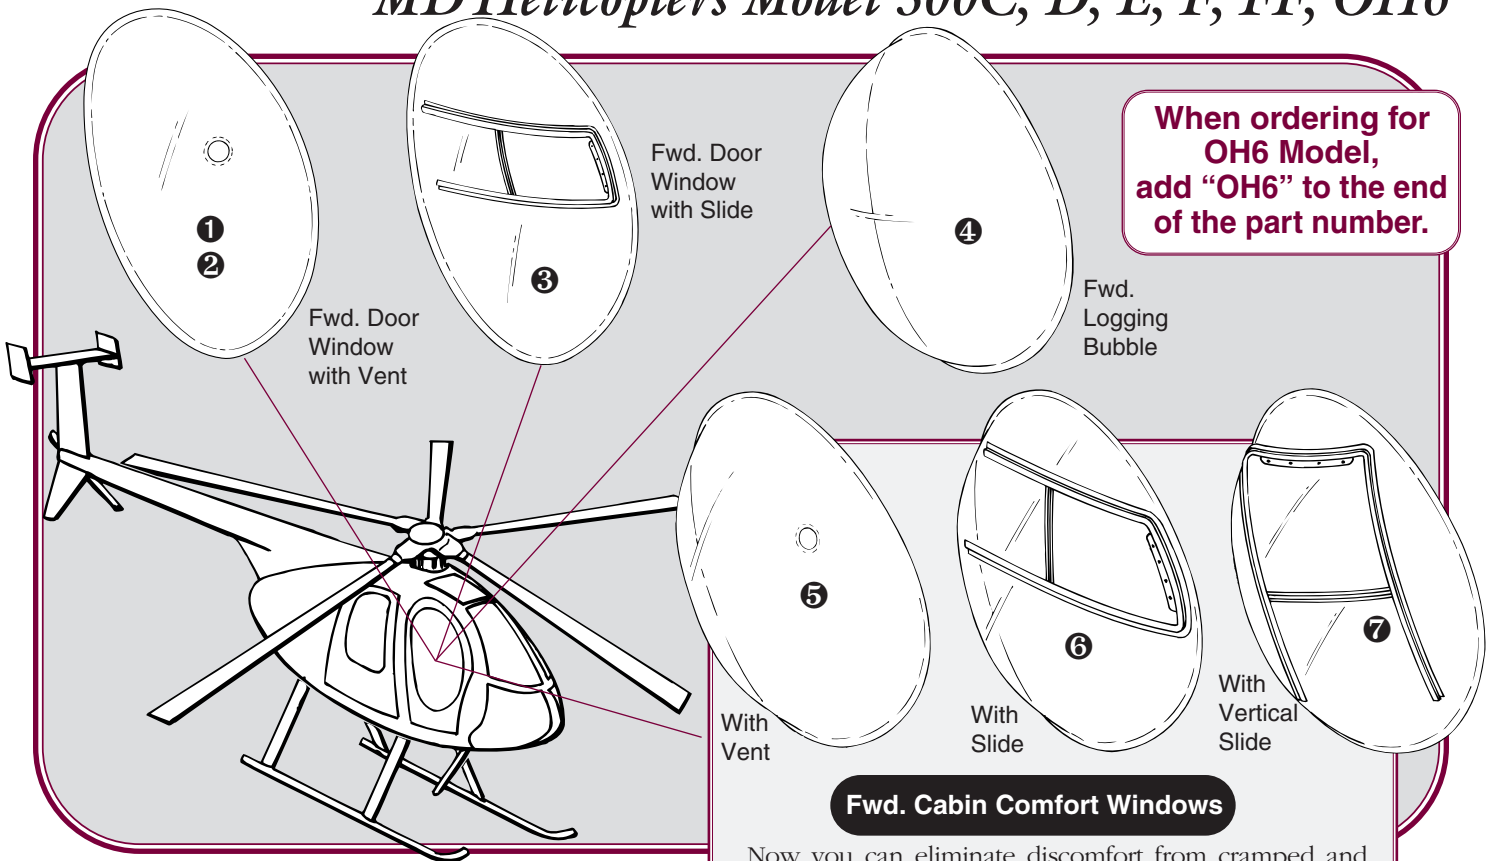

**1 Fwd. Door Window with Vent (Military Clear)**

Part Number		Replaces OEM No.
369-3505-1	L/H	369H2024-61,81 369H2046-501,503,505
369-3505-2	R/H	369H2024-62,82 369H2046-502,504,506

**2 Fwd. Door Window with Vent (Light Smoke Tint)**

Part Number		Replaces OEM No.
369-3505-1	L/H	369H2024-1,31,51,71
369-3505-2	R/H	369H2024-2,32,52,72

**3 Fwd. Door Window with Slide ★**

Part Number		Replaces OEM No.
369-3505-3	L/H	Tech-Tool Design
369-3305-4	R/H	Tech-Tool Design

**4 Fwd. Logging Bubble ★**

Part Number		Replaces OEM No.
369-3507-1	L/H	Tech-Tool Design
369-3507-2	R/H	Tech-Tool Design

**5 Fwd. Cabin Comfort Window with Vent ★**

Part Number		Replaces OEM No.
369-4505-1	L/H	Tech-Tool Design
369-4505-2	R/H	Tech-Tool Design

**6 Fwd. Cabin Comfort Window with Slide ★**

Part Number		Replaces OEM No.
369-4505-3	L/H	Tech-Tool Design
369-4505-4	R/H	Tech-Tool Design

**7 Fwd. Cabin Comfort Window with Vertical Slide ★**

Part Number		Replaces OEM No.
369-4505-7	L/H	Tech-Tool Design
369-4505-8	R/H	Tech-Tool Design

Now you can eliminate discomfort from cramped and restricted cabin space with Tech-Tool's Cabin Comfort Windows. Our windows are "Wedged" and not "Bubbled" to provide passengers/crew more shoulder and elbow room than standard factory windows.


★ For these windows, specify Light Smoke or Military Clear.



**TECH-TOOL PLASTICS, INC.**

7800 Skyline Park Drive • Fort Worth, Texas 76108 • www.tech-tool.com

# MD Helicopters Model 500C, D, E, F, FF, 500N, 600N, OH6

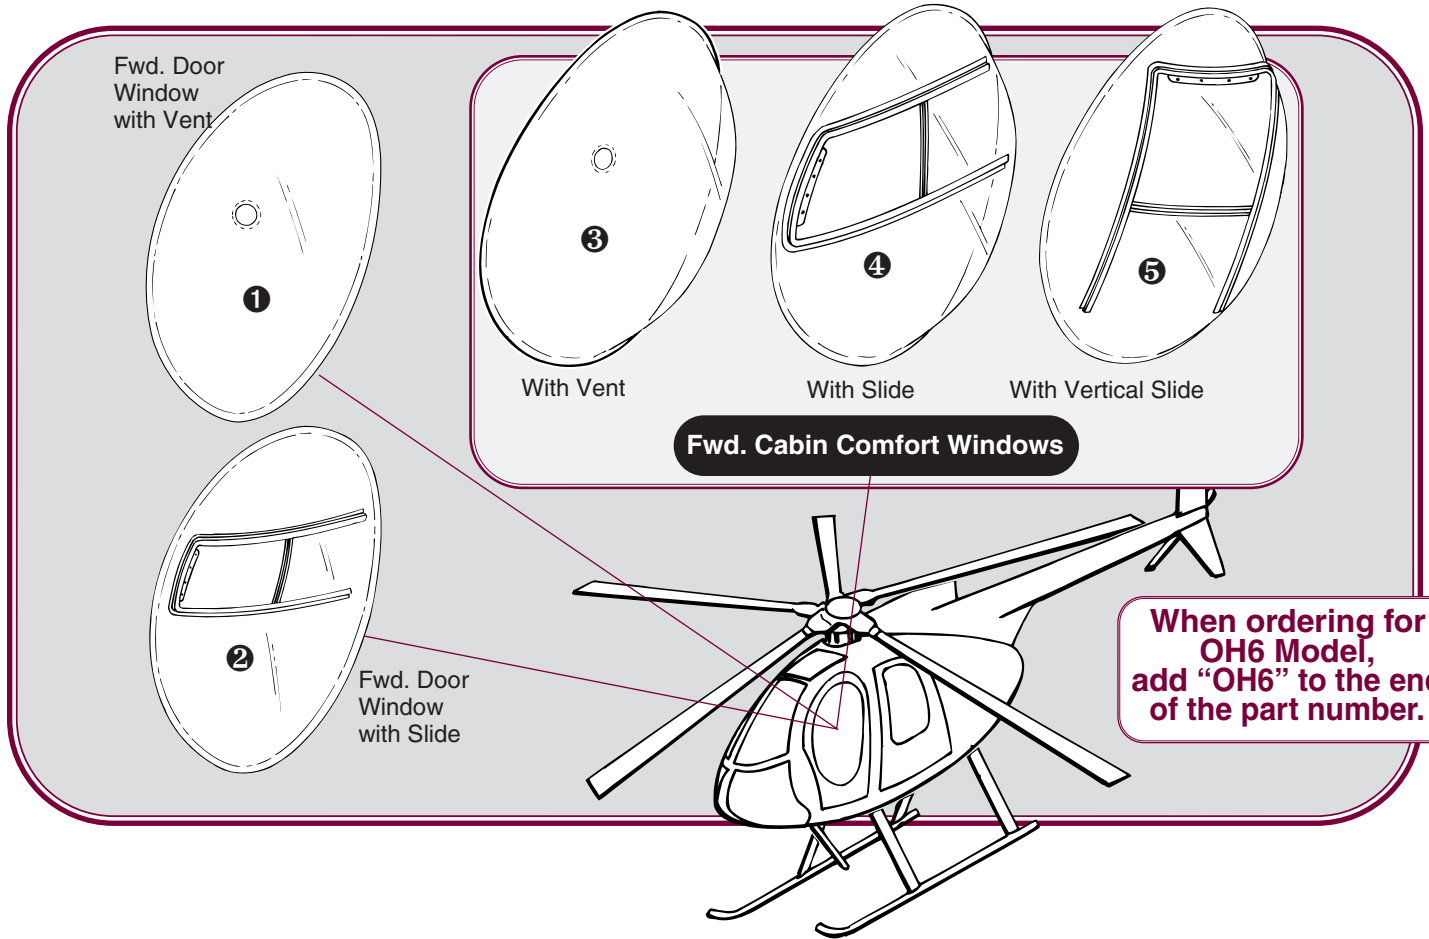

## QUICK-CHANGE RUBBER MOUNT

**1 Fwd. Door Window with Vent ★**

Part Number		Replaces OEM No.
369-3505-41	L/H	Tech-Tool Design
369-3505-42	R/H	Tech-Tool Design

**2 Fwd. Door Window with Slide ★**

Part Number		Replaces OEM No.
369-3505-43	L/H	Tech-Tool Design
369-3505-44	R/H	Tech-Tool Design

**3 Fwd. Cabin Comfort Window with Vent ★**

Part Number		Replaces OEM No.
369-4505-41	L/H	Tech-Tool Design
369-4505-42	R/H	Tech-Tool Design

**4 Fwd. Cabin Comfort Window with Slide ★**

Part Number		Replaces OEM No.
369-4505-43	L/H	Tech-Tool Design
369-4505-44	R/H	Tech-Tool Design


**5 Fwd. Cabin Comfort Window with Vertical Slide ★**

Part Number		Replaces OEM No.
369-4505-45	L/H	Tech-Tool Design
369-4505-46	R/H	Tech-Tool Design

★ For these windows, specify Light Smoke or Military Clear.

## Replacement Windows for the Helicopter World

# MD Helicopters Model 500C, D, E, F, FF

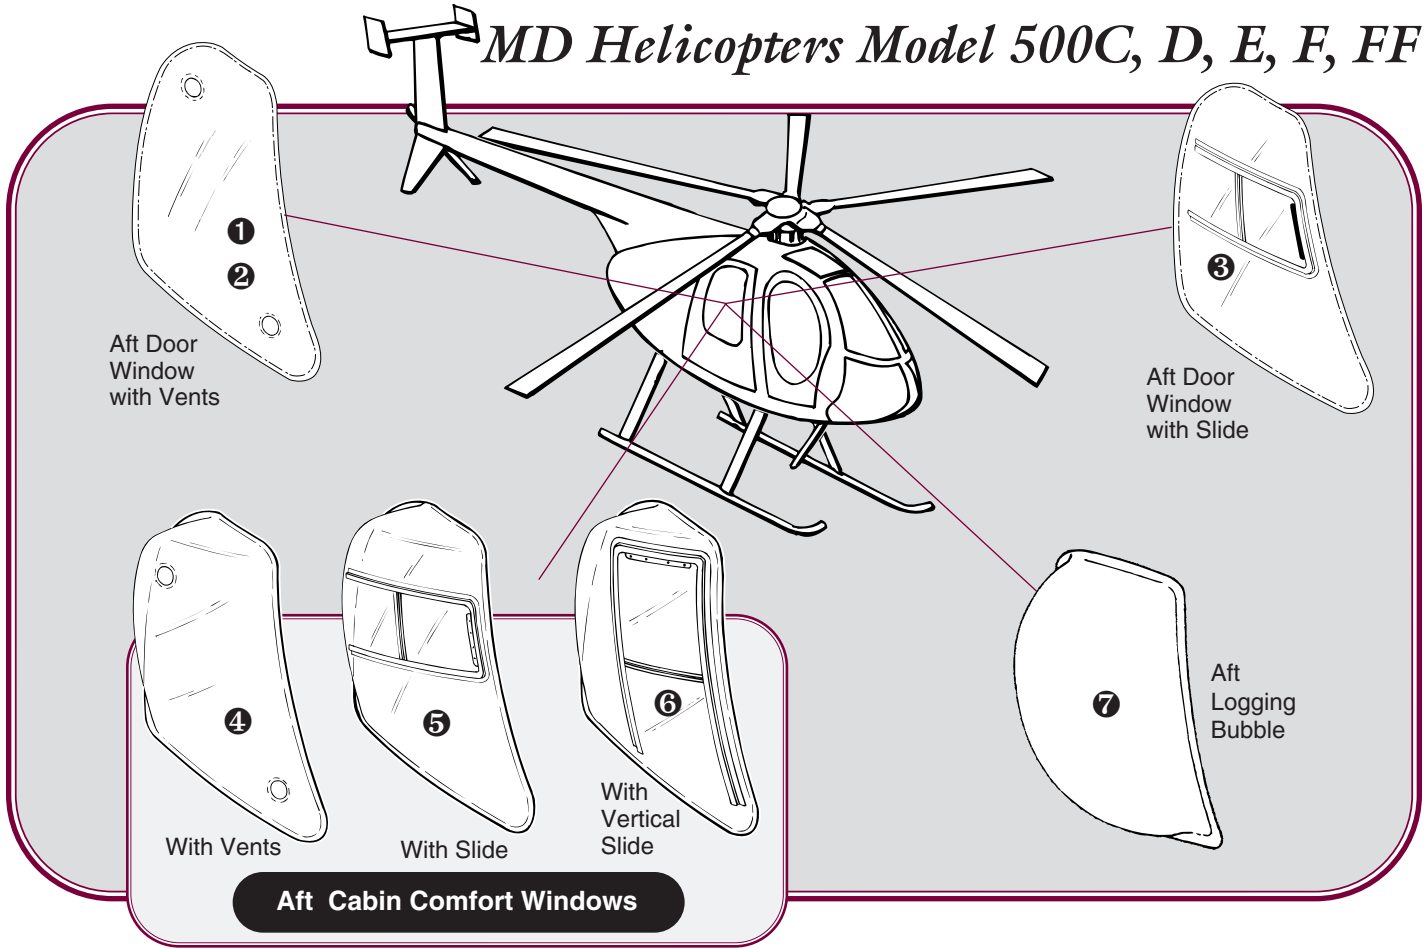

<b>1 Aft Door Window with Vents (Light Smoke Tint)</b>		
Part Number		Replaces OEM No.
369-3506-1	L/H	369H2040-51,71
369-3506-2	R/H	369H2040-52,72
<b>2 Aft Door Window with Vents (Military Clear)</b>		
Part Number		Replaces OEM No.
369-3506-1	L/H	Tech-Tool Design
369-3506-2	R/H	Tech-Tool Design
<b>3 Aft Door Window with Slide ★</b>		
Part Number		Replaces OEM No.
369-3506-3	L/H	Tech-Tool Design
369-3506-4	R/H	Tech-Tool Design

★ For these windows, specify Light Smoke or Military Clear.


<b>4 Aft Cabin Comfort Window with Vents ★</b>		
Part Number		Replaces OEM No.
369-4506-1	L/H	Tech-Tool Design
369-4506-2	R/H	Tech-Tool Design
<b>5 Aft Cabin Comfort Window with Slide ★</b>		
Part Number		Replaces OEM No.
369-4506-3	L/H	Tech-Tool Design
369-4506-4	R/H	Tech-Tool Design
<b>6 Aft Cabin Comfort Window with Vertical Slide ★</b>		
Part Number		Replaces OEM No.
369-4506-7	L/H	Tech-Tool Design
369-4506-8	R/H	Tech-Tool Design
<b>7 Aft Logging Bubble ★</b>		
Part Number		Replaces OEM No.
369-3508-1	L/H	Tech-Tool Design
369-3508-2	R/H	Tech-Tool Design



**TECH-TOOL PLASTICS, INC.**

7800 Skyline Park Drive • Fort Worth, Texas 76108 • www.tech-tool.com

# MD Helicopters Model 500C, D, E, F, FF, 500N, 600N

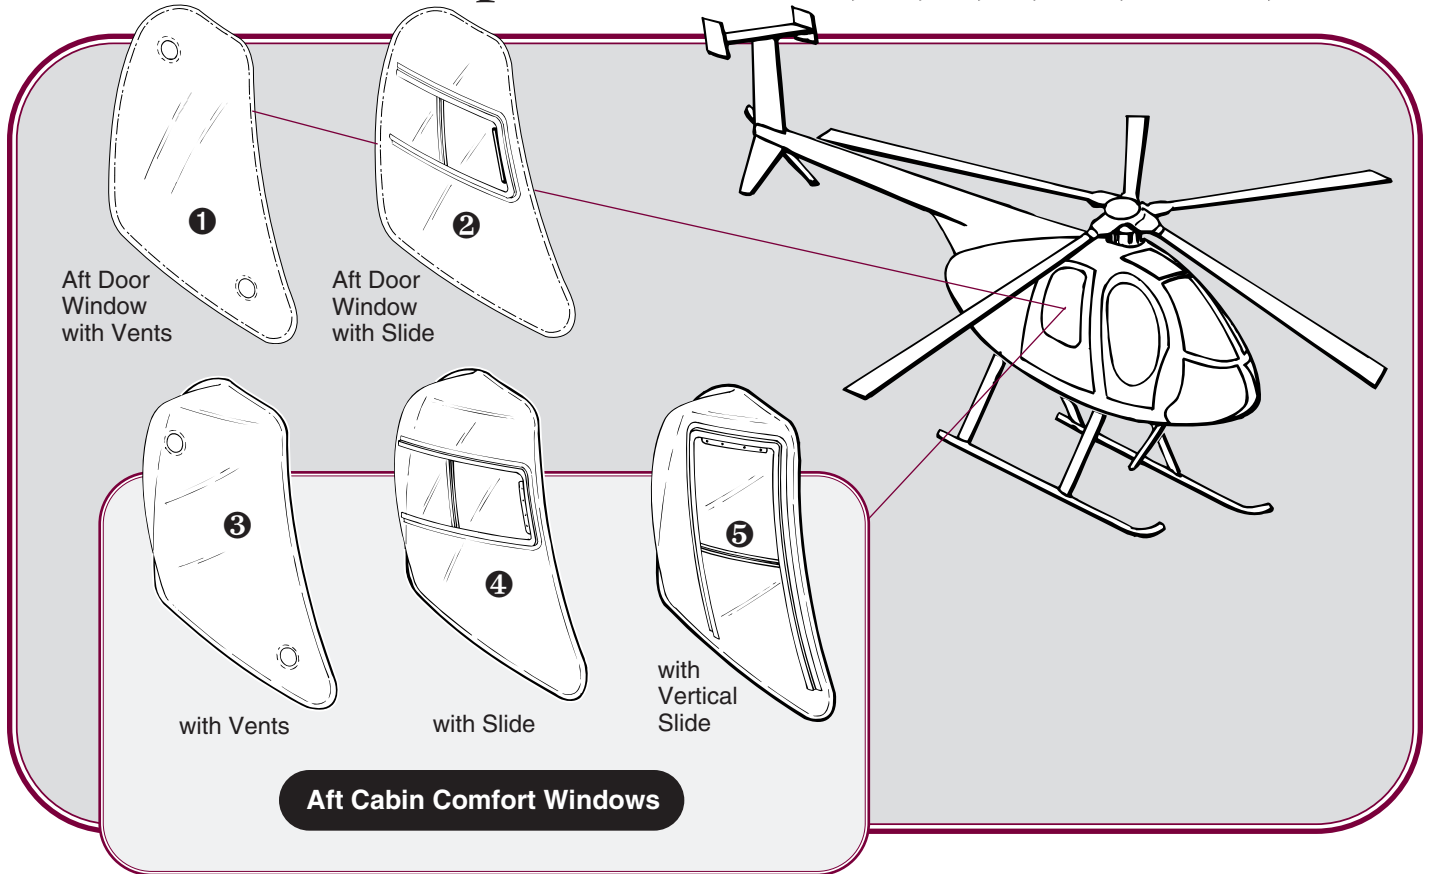

## QUICK-CHANGE RUBBER MOUNT

### 1 Aft Door Window with Vents ★

Part Number		Replaces OEM No.
369-3506-41	L/H	Tech-Tool Design
369-3506-42	R/H	

### 2 Aft Door Window with Slide ★

Part Number		Replaces OEM No.
369-3506-43	L/H	Tech-Tool Design
369-3506-44	R/H	

★ For these windows, specify Light Smoke or Military Clear.

### 3 Aft Cabin Comfort Window with Vents ★

Part Number		Replaces OEM No.
369-4506-41	L/H	Tech-Tool Design
369-4506-42	R/H	

### 4 Aft Cabin Comfort Window with Slide ★

Part Number		Replaces OEM No.
369-4506-43	L/H	Tech-Tool Design
369-4506-44	R/H	

### 5 Aft Cabin Comfort Window with Vertical Slide ★

Part Number		Replaces OEM No.
369-4506-45	L/H	Tech-Tool Design
369-4506-46	R/H	

**Replacement Windows for the Helicopter World**